 


Tools

Removal Tool

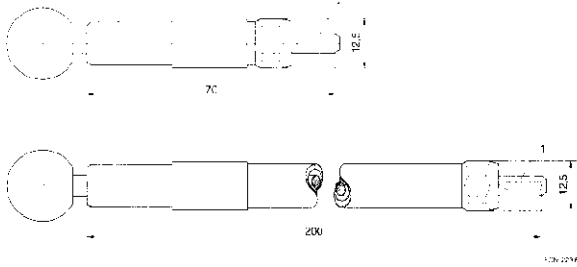

† Ferrule (spare part)

For replacing the special contacts or connectors
 DIN 41612 M and SIFDECON.


Ordering information

Item	Part No.
Removal tool	
length 70 mm	2-1393524-4
length 200 mm	2-1393524-6
Spare part	
Ferrule	2-1393524-7


packing unit = 1

Setting Gauge

Protective caps/setting gauges

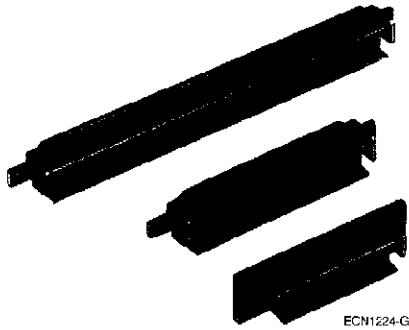

- The setting gauges are used to position coaxial jacks and pre-mating high-current plugs on male connectors DIN 41612 M if the pins are flow-soldered in PC boards.
- The gauges are held by clamping in connector body and protect the blade contacts.
- The gauges provide protection
 - during transport (if the male connectors have already been removed from the packaging),
 - during assembly,
 - against soiling,
 - during soldering.

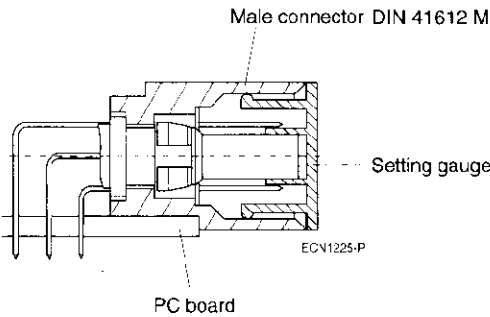

Ordering information

Item		Part No.
Setting gauge for types	M	1393494-9
	M/2	1-1393494-0
	M/3	1 1393494-1

packing unit = 100

Note:

These gauges can also be used to protect types C, C/2, C/3 and D.